Mount'n Mover

by BlueSky Designs

quick guide




This guide describes the basics of setting up your Mount'n Mover so that it stops at, moves from, and returns to any desired position. For further assistance, please call us at 888-724-7002, or 612-724-7002 or check out our website for more detailed instructions.

mountnmover.com


- detach Quick Release Plate (QRP)

attach it - reattach QRP

- attach device to device plate

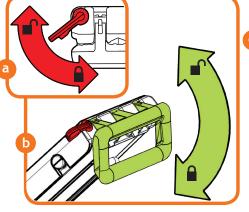




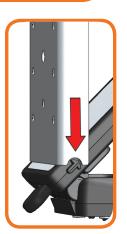

- a: Release "red lock" by rotating clockwise
- **b:** Unlock by pulling out + up on handle (highlighted green)
- c: Lift off by pulling forward and up

Reverse these steps to re-attach to device plate

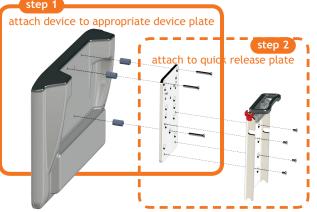



For a tighter and more permanent mount to the post, tighten 4 bolts to snug. Be sure Link Lever is closed.


move it

- move shoulder & elbow joints
- rotate wrist joint
- change tilt-plate angle

Depress **HOOP** to unlock elbow & shoulder joints

Move It from lock position

To find lock position release downward pressure on hoop and move until arm stops

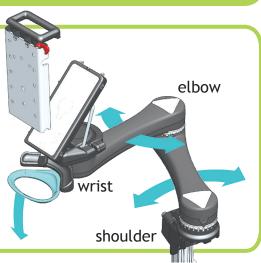



Depress PADDLE to release the wrist lock

Move it

Wrist will remain unlocked until it reaches lock position



Slide the LEVER to the

left to lock the tilt-plate

desired orientation

set it

To set custom lock positions:

Align black arrow with desired lock position and slide lock tab down

Initial Setup

Flip up all lock tabs so joints move freely with no lock positions

1 You cannot unset a lock tab with the black arrow directly above it

Orient to best fit user needs: move black arrow to nearest lock tab; slide lock tabs down to set locks



Fine Tune Wrist

precisely adjust lock position


- 1. Set lock
- Loosen hex head bolt
- 3. Adjust device orientation 7
- 4. Tighten hex head bolt





Mount Link Cube



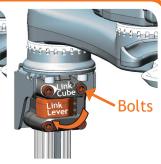

Open Link Lever (if difficult to open, loosen each bolt slightly).

 
Slide Link Cube on to post. Line up slot on post with front of cube.


Close Link Lever to secure cube to post. If cube moves on post, tighten bolts 1/4 turn.

- step-by-step instructions and mounting options are available at: WWW.MOUNTNMOVER.COM

mount it

- periodically check that all screws are tight



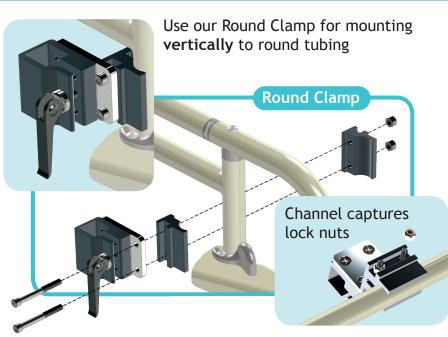



Collar Clamps come in a wide variety of sizes to fit most round tube wheelchair frames


Our Bridge Clamp provides a stable mounting solution for most chairs with round tubing






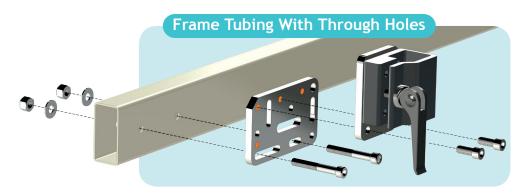


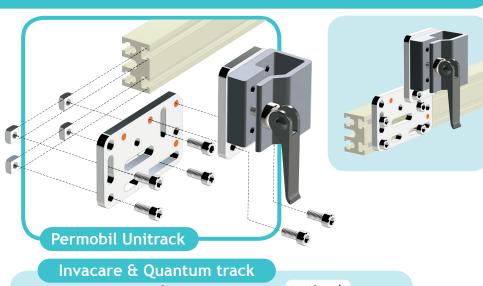

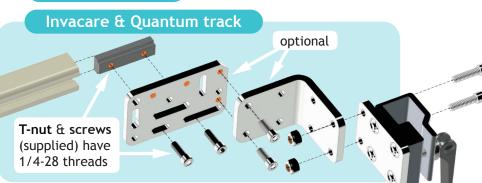

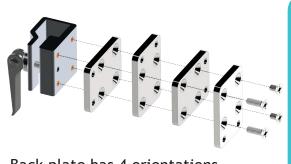

Back plate has 4 orientations

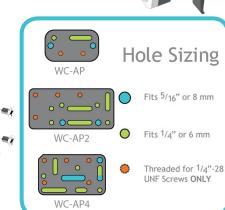


Clamp Pressure




adjust it


- ${\bf a} + {\bf b}$ post should be vertically oriented for the user's typical upright position (dashed line in ${\bf a}$)
- \boldsymbol{c} slots in clamp + post must align
- ${f d}$ post clamp pressure should be set so that, when clamped, the post is held tightly and securely
- e post height set screw ensures repeatable height & safety

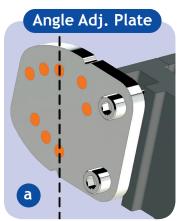


Flip the plate for more angles (every 7.5°)




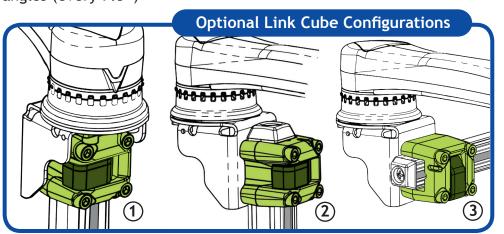

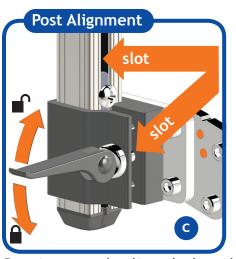

Post is correctly aligned when the post and clamp slots are aligned

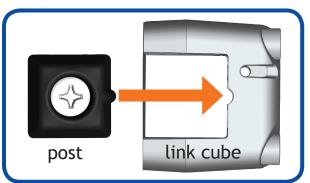

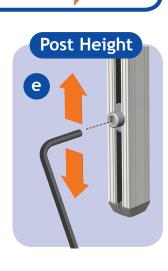

Quick Guide rev. 3, 07-23-16