

Quick Connect Receiver (QCR) Instructions

(Attaching the QCR to Nova Chat 8)


Included Hardware:

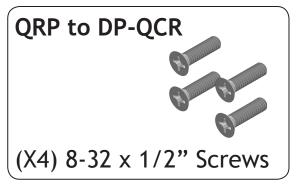

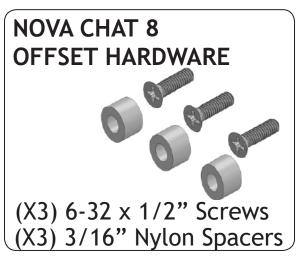




Attaching the Quick Connect Receiver (QCR) to the Quick Release Plate (QRP)

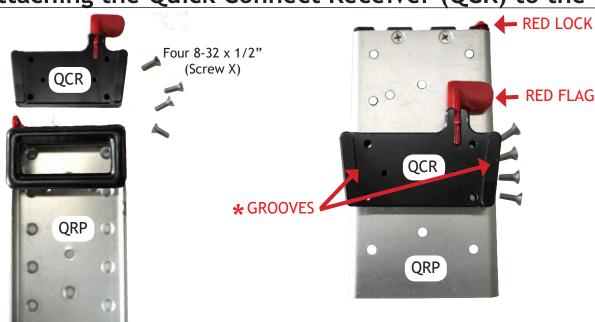

Quick Connect Receiver (QCR) and the Quick Release Plate (QRP) and hardware four screw X. Line up four holes in the QCR with corresponding holes in the QRP. ★ Note the grooves in the QCR are facing out. The red lock on the QRP and the red flag on the QCR are facing up.

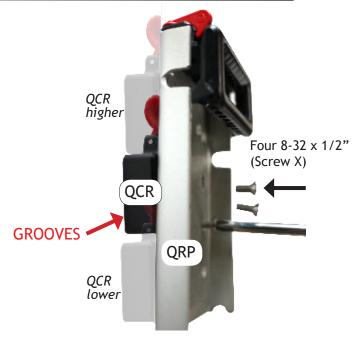

Feed the four 8-32 x 1/2" screws through the inside of the QRP and into the back of the QCR. The hole spacing in the QRP allows adjustment higher or lower depending on preference

Page 1

Nova Chat 8 Attachment Instructions (Attaching to Easy Mover with Quick Connect Receiver)



Remove the screws and plate from the back of the Nova Chat 8



Use spacers and screws from hardware bag labeled "Nova Chat Offset Hardware". Place spacers over threaded holes.



Place plate over the spacers and reattach to the back of the Nova Chat 8 with the longer screws included in the hardware bag.




 
Close up view of the spacers underneath the attachment plate.



Nova Chat 8 mounted to the Easy Mover with Quick Connect.

Nova Chat 8 Attachment Instructions (Attaching to Mount'n Mover Arm with Quick Release Plate)

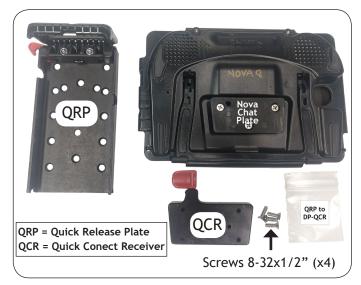





2 Slide the QCR onto the Nova Chat 8 plate until it "clicks".



Place the QRP over the QCR and attach with the four screws labeled "QRP to DP-QCR"



Nova Chat 8 attached to the Dual Arm
Mount'n Mover with Tilt Plate



Remove the Nova Chat 8 from the Mount'n Mover at either the QCR (Quick Connect Receiver) or the QRP (Quick Release Plate).

