


Post Extension Kit (PEK-12) * other lengths available

* Alternative post clamp configuration. Detach silver plate from black clamp and rotate.

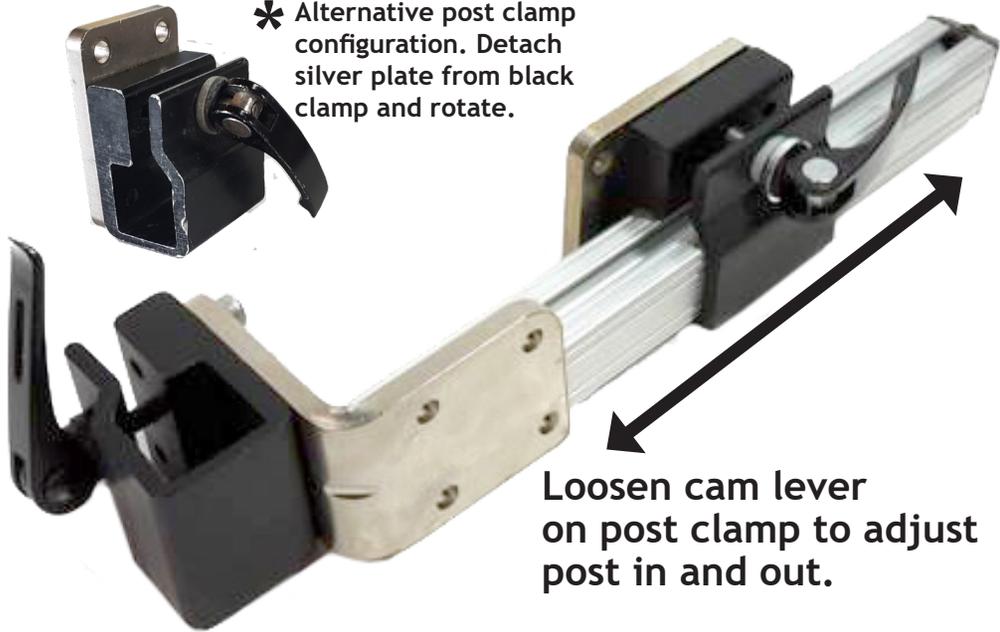

Use the Permobil Unitrack hardware to attach the LAE to the track under the armrest. The nuts slide into the dual track.

