



# Setting up a Double Decker Mounting System



To set up a double decker system, reconfigure the link cube to the outside of the link bracket so that the mount can be located lower on the post. This shown double decker system includes a Locking Dual Arm Mount'n Mover and a Simple Mount Small Tray with an 18" post.



This mount is the Easy Mover Dual Arm with Locking Tilt. It is set up as a double decker with the Simple Mount Small Tray.

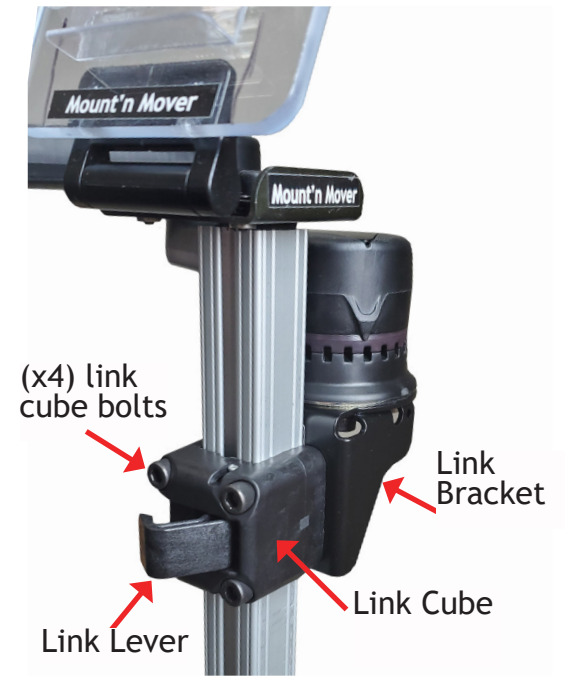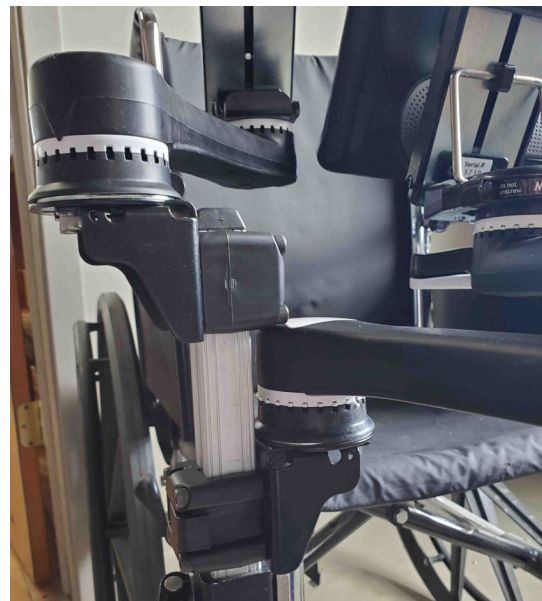

The four bolts holding the link cube to the link bracket should be just snug enough so when the link lever is open, the mount can be adjusted up or down the post. When the lever is closed the mount cannot be moved. If you cannot close the link lever then the bolts are too tight.

This configuration has a dual arm mount and a single arm mount. Note the location of the dual arm mount on the post and the configuration of the link cube on the post.